



STRAIGHTEN TOURING CROSSMEMBER

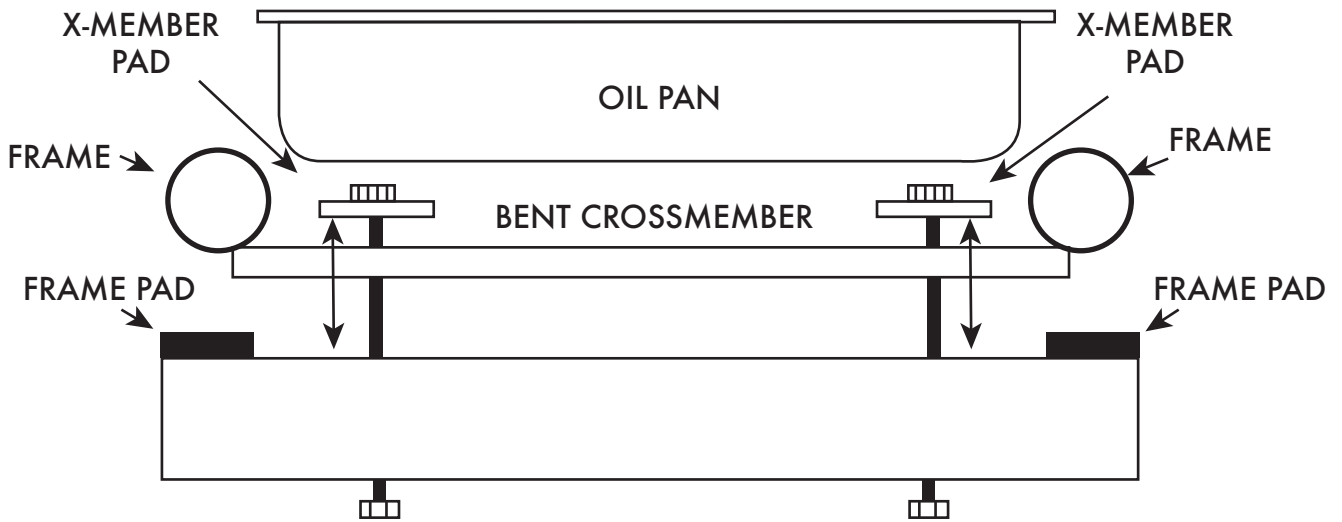

USE ANTI-SEIZE ON
BOLTS & NUT PLATE

1ST PULL

SHOULD BE FROM
LEFT SIDE (PRIMARY SIDE)

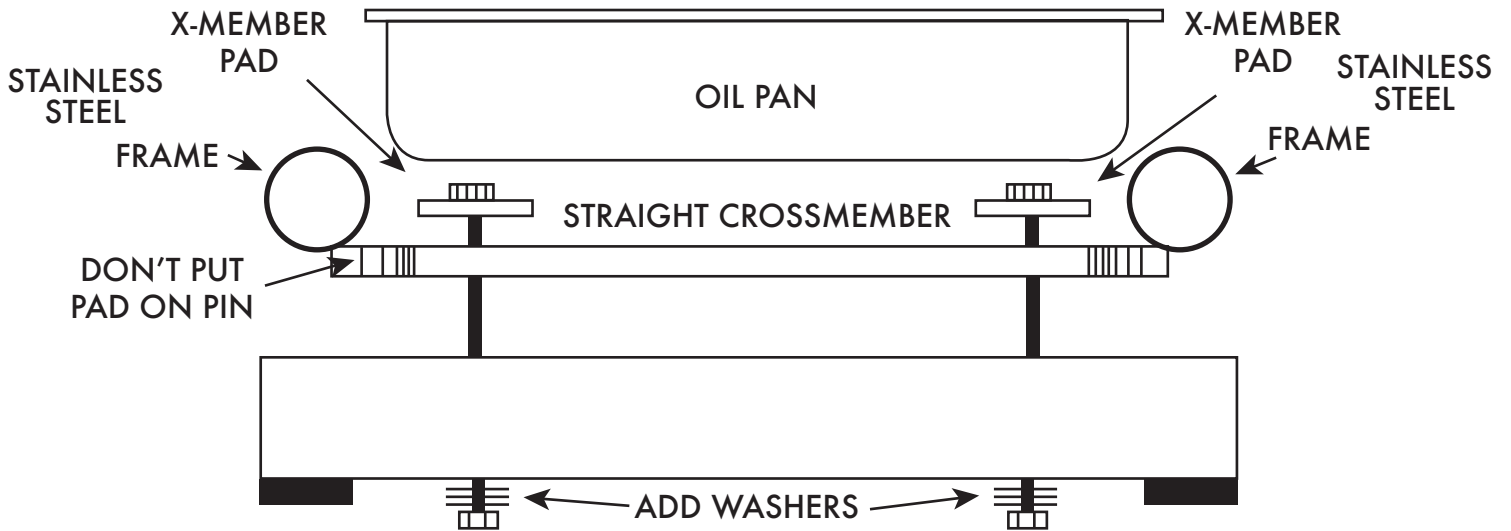

Finish by using narrow flat side of tool and move it around to iron out the crossmember. Turn x-member pads on flat side as well.

QUESTIONS? 818.623.0697

DO NOT PRY ON OIL PAN

TRUE-TRACK, INC.